

Concentrating on audio since 1988

# **MP2005A** Amplifier Volume Controller



### **F**eatures

- ➤ Remote Amplifier Volume Controller
- ightharpoonup Rated output 5W/4 $\Omega$  (distortion 10%)
- $\triangleright$  Output sensitivity: 10kΩ, 300mV (±10%), unbalanced
- Provided with power switch, capable of independent control of volume

## Specification

Model	MP2005A
Rated output	5W/4Ω (distortion 10%)
Output sensitivity	10kΩ, 300mV (±10%), unbalanced
Frequency response	80Hz-18kHz (±3dB)
Harmonic distortion	<1% (1kHz, 1/3 rated output voltage)
Signal to noise	> 70dB
Protection	AC fuse, short circuit protection
Power supply	AC220-240V/50Hz
Power consumption	8W
Size of panel (L×W×H)	86×86×68mm
Installation size of base box (L×W×H)	78×78×50mm
Net weight	0.2kg




#### Concentrating on audio since 1988

#### How to install:

1. Connect the signal input line with the sound source (white represents hot signal end), connect the power output line with the speaker (red +, black -), and connect power line with AC 220V power supply in a safe manner (see figure below);

Warning: It is prohibited to connect AC220V power supply to signal input line or power output line!

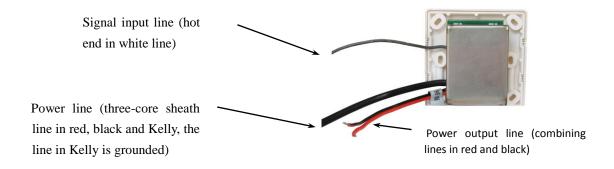

- 2. Apply force outwards from the buckling position at the main body of the part to take off from the face frame;
- 3. After checking the lines for perfect connection, push the main body of part carefully into installation base box, lock up with screws, buckle face frame;
- 4. Turn volume knob to adjust the volume as required. In case of long-term idling, please turn volume knob to "**OFF**", to shut off the power supply.